

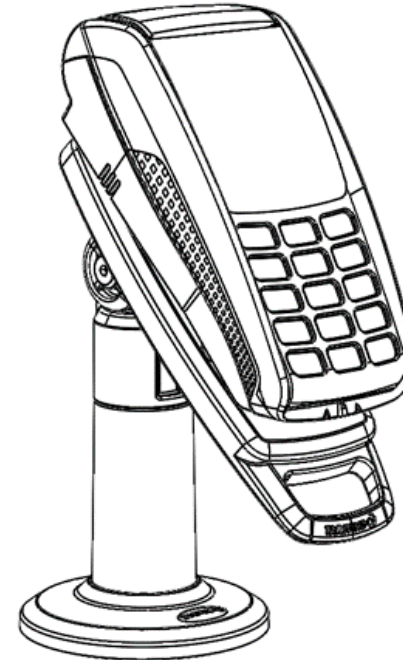



Ingenico iCT220/250 BackPlate

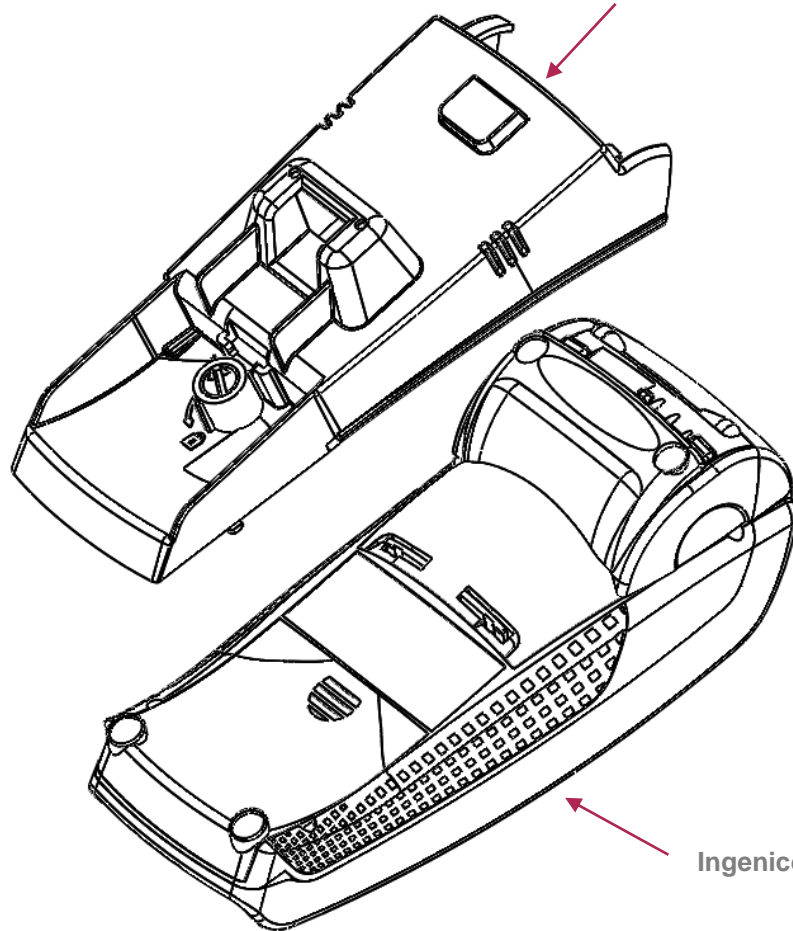

Ingenico iCT220/250 Terminal

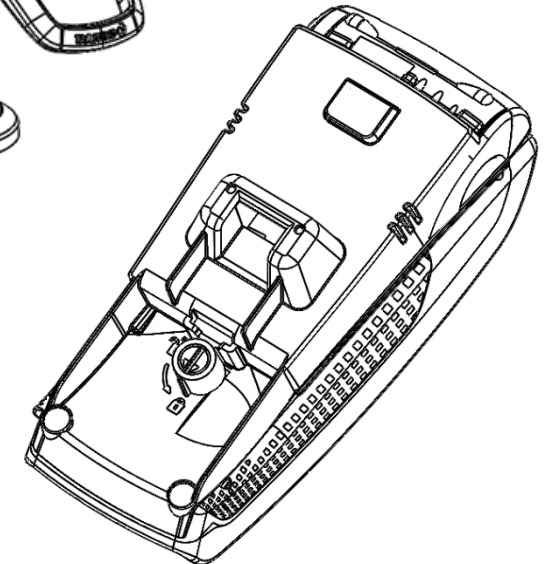


**TOOLS**

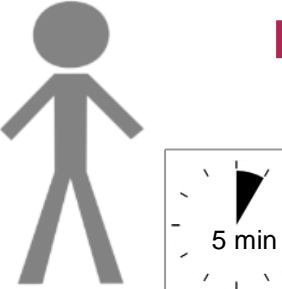


5 min

**PARTS**

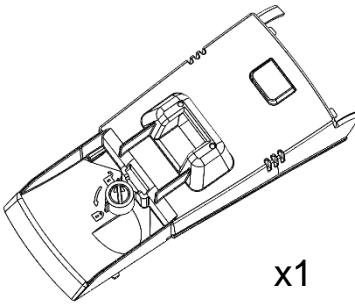

x1


**1**

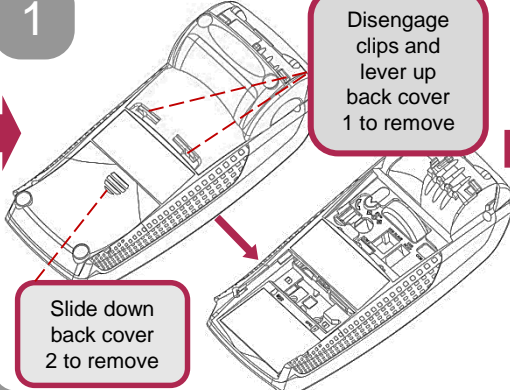

Disengage clips and lever up back cover 1 to remove

Slide down back cover 2 to remove


**2**

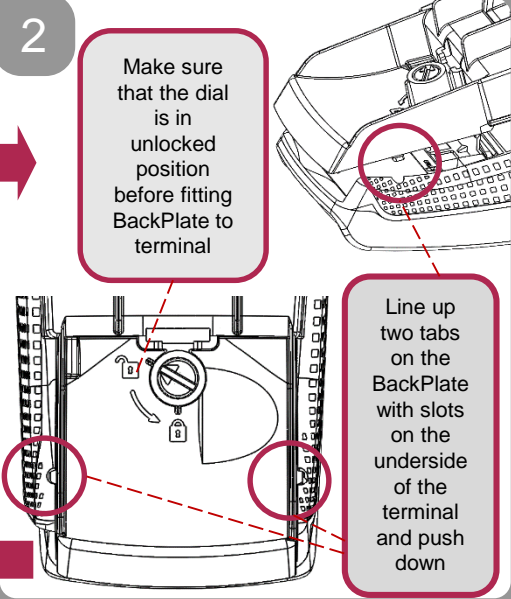

Make sure that the dial is in unlocked position before fitting BackPlate to terminal


Line up two tabs on the BackPlate with slots on the underside of the terminal and push down

**3A**

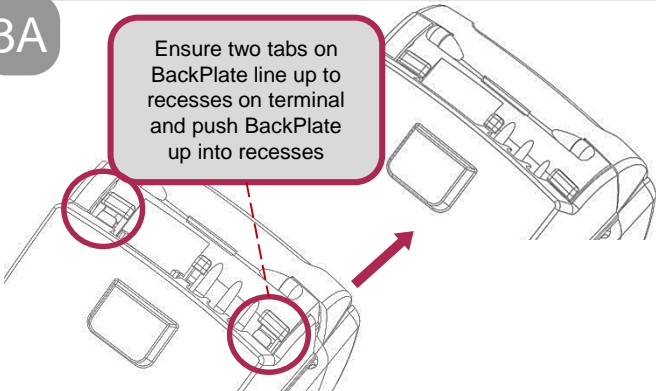


Ensure two tabs on BackPlate line up to recesses on terminal and push BackPlate up into recesses

**3B**

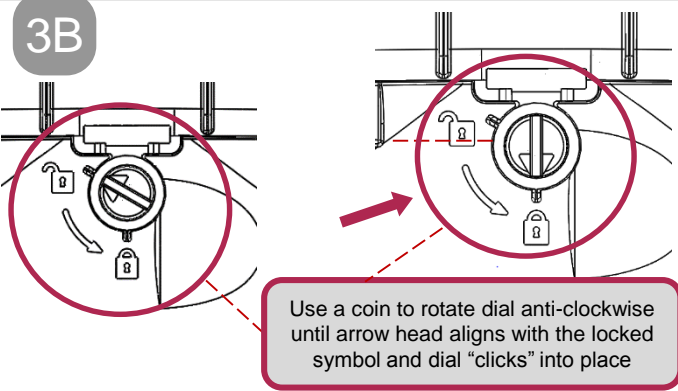


Use a coin to rotate dial anti-clockwise until arrow head aligns with the locked symbol and dial "clicks" into place

**4**

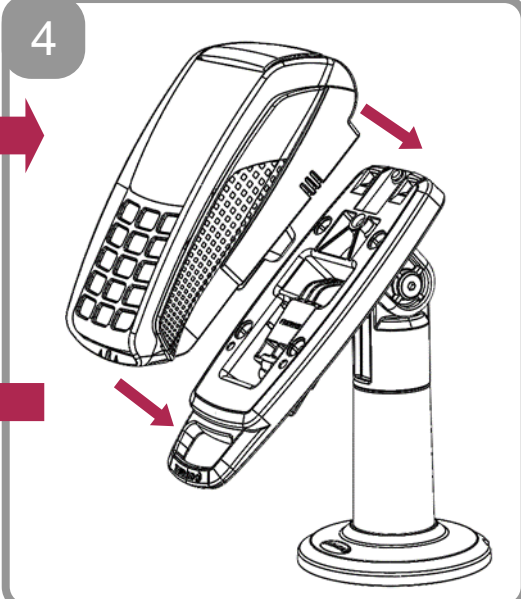

**5**

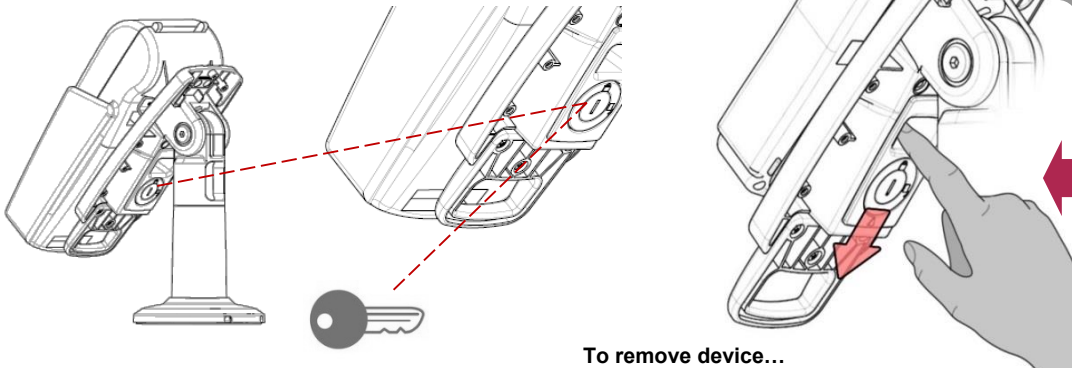

**OPTIONAL**

If locking device, turn key then remove to secure.

To unlock, first ensure key fitted.

To remove device...