



**TOOLS**

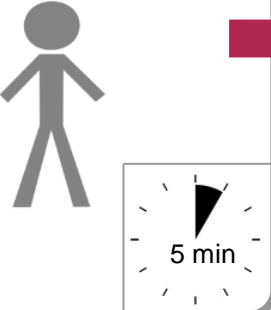


5 min

**PARTS**

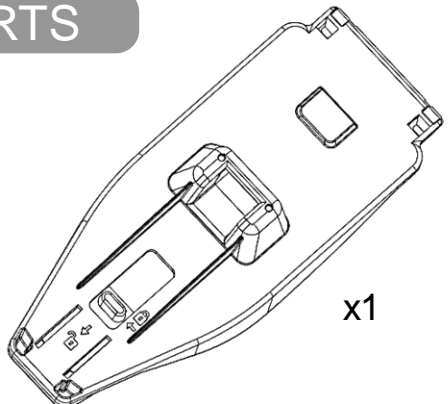


x1

**1**

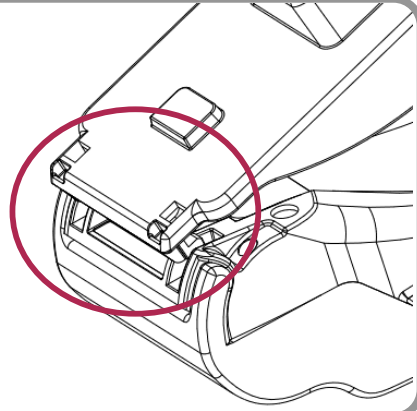


Fit both hooks at front of unit

**3**

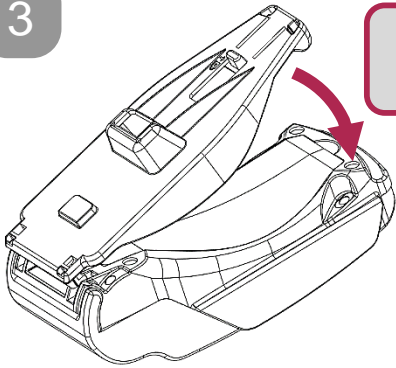

Rotate PEDPack down

**4**

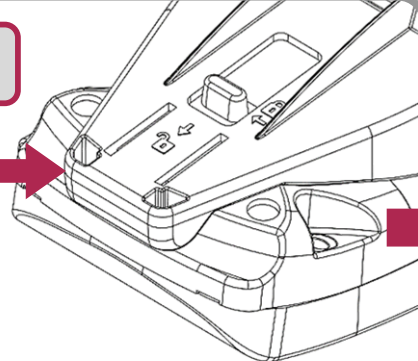


Push down at end and click in place

CLICK !!

**CHECK** - push slider upwards to line up with lock symbol to check locked

**5**

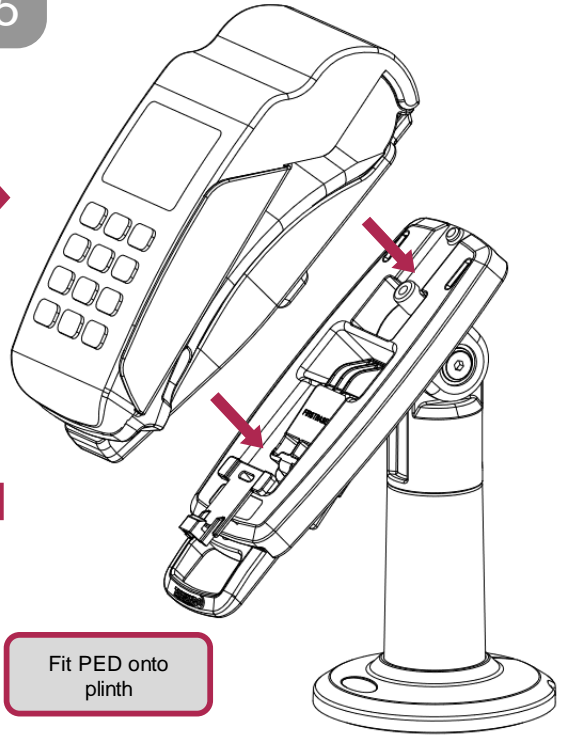

Fit PED onto plinth


**6**

**GENERIC PED SHOWN**

**OPTIONAL**

If locking device, turn key then remove to secure.

To unlock, first ensure key fitted.

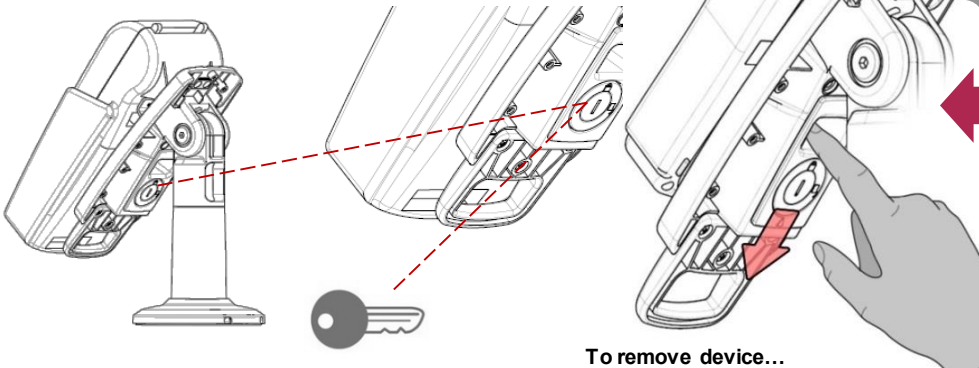

To remove device...