



TOOLS

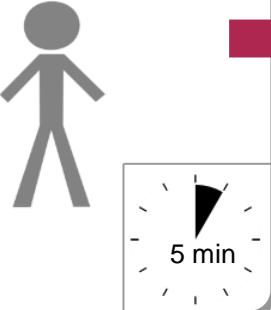

5 min


PARTS

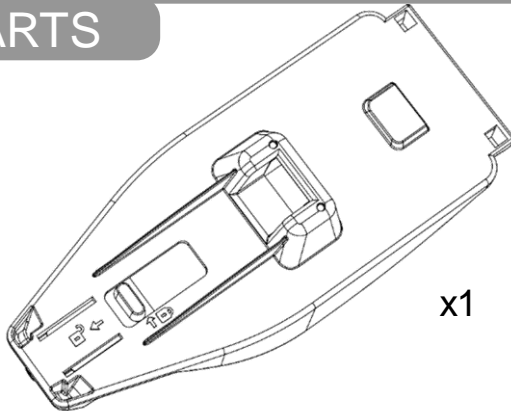

x1


1

Fit both hooks at front of unit

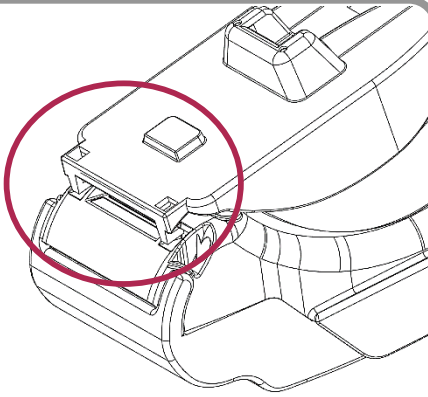

3

Rotate PEDPack down

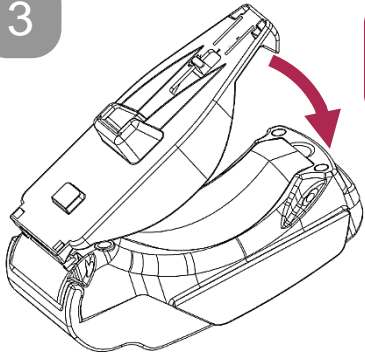


4

Push down at end and click in place


CLICK !!

CHECK - push slider upwards to line up with lock symbol to check locked

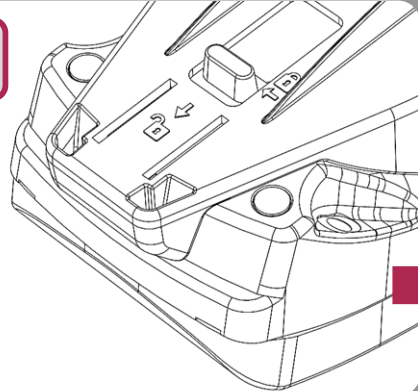

5


Fit PED onto plinth

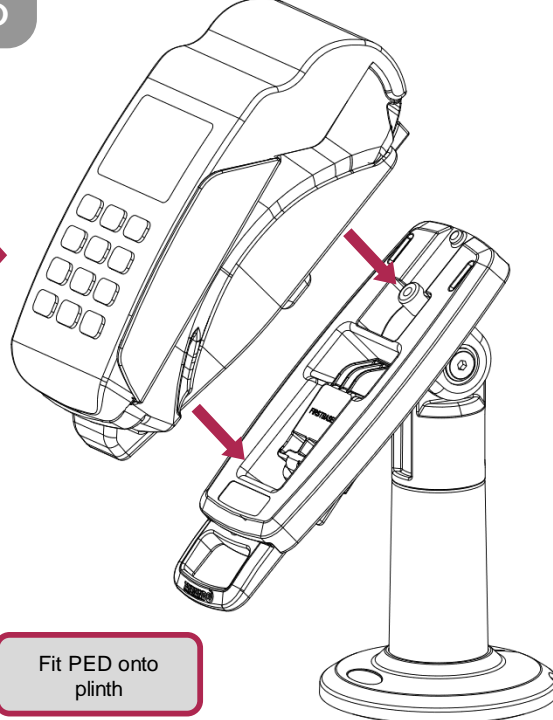

6 GENERIC PED SHOWN

OPTIONAL

If locking device, turn key then remove to secure.
To unlock, first ensure key fitted.

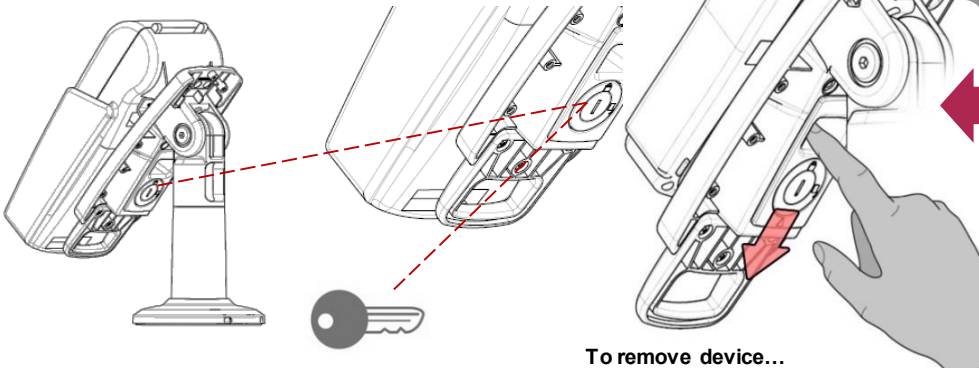

To remove device...