




TOOLS

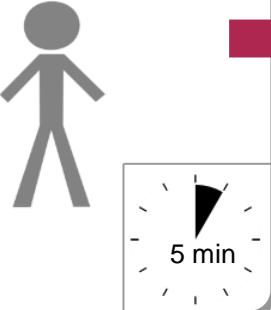

PARTS

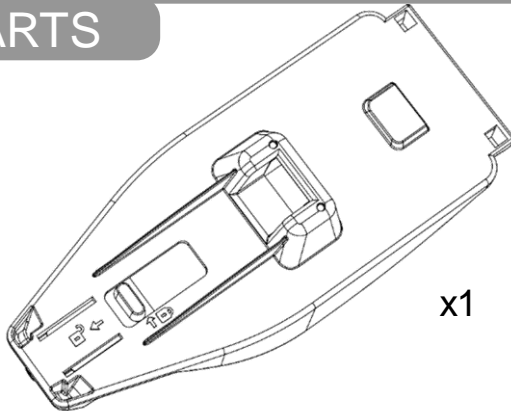


1

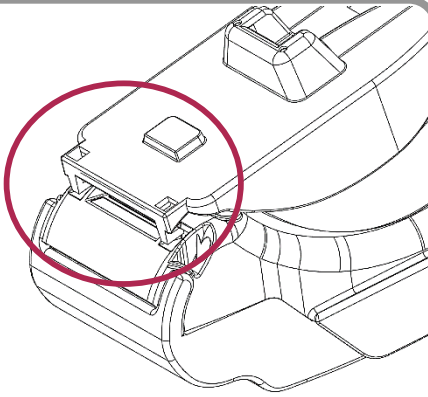


Fit both hooks at front of unit

3

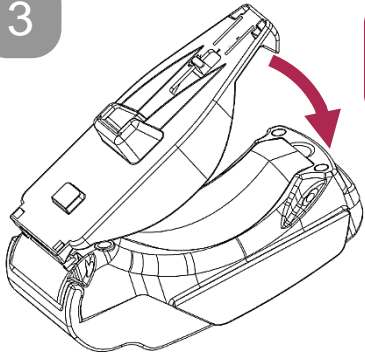

Rotate PEDPack down

4

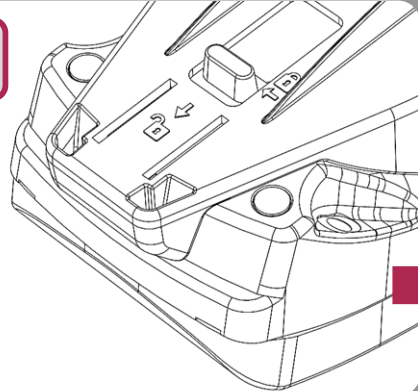


Push down at end and click in place

CLICK !!


CHECK - push slider upwards to line up with lock symbol to check locked

5

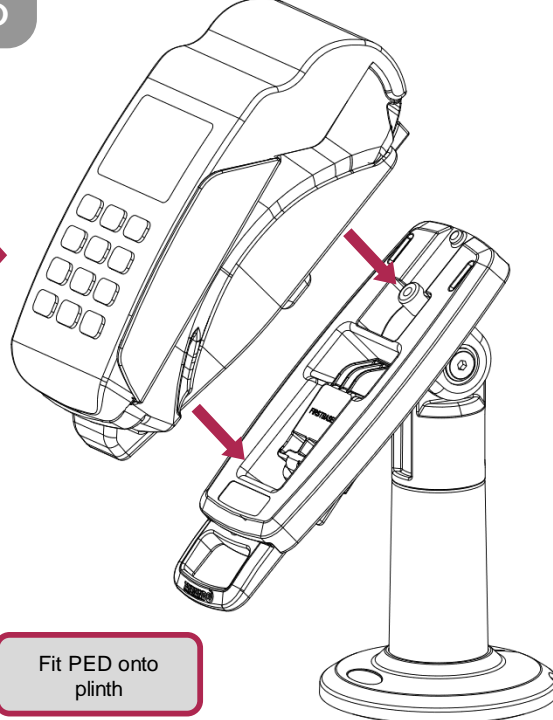

Fit PED onto plinth

6 **GENERIC PED SHOWN**

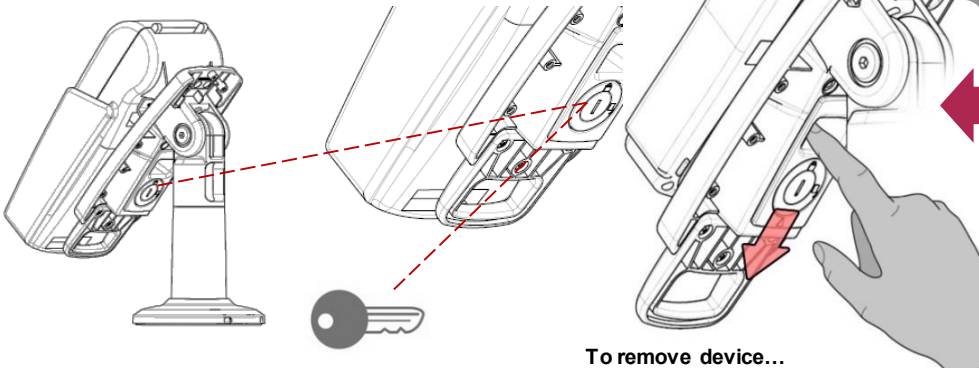

OPTIONAL

If locking device, turn key then remove to secure.

To unlock, first ensure key fitted.

To remove device...