



Ingenico iPP320/350 PEDPack

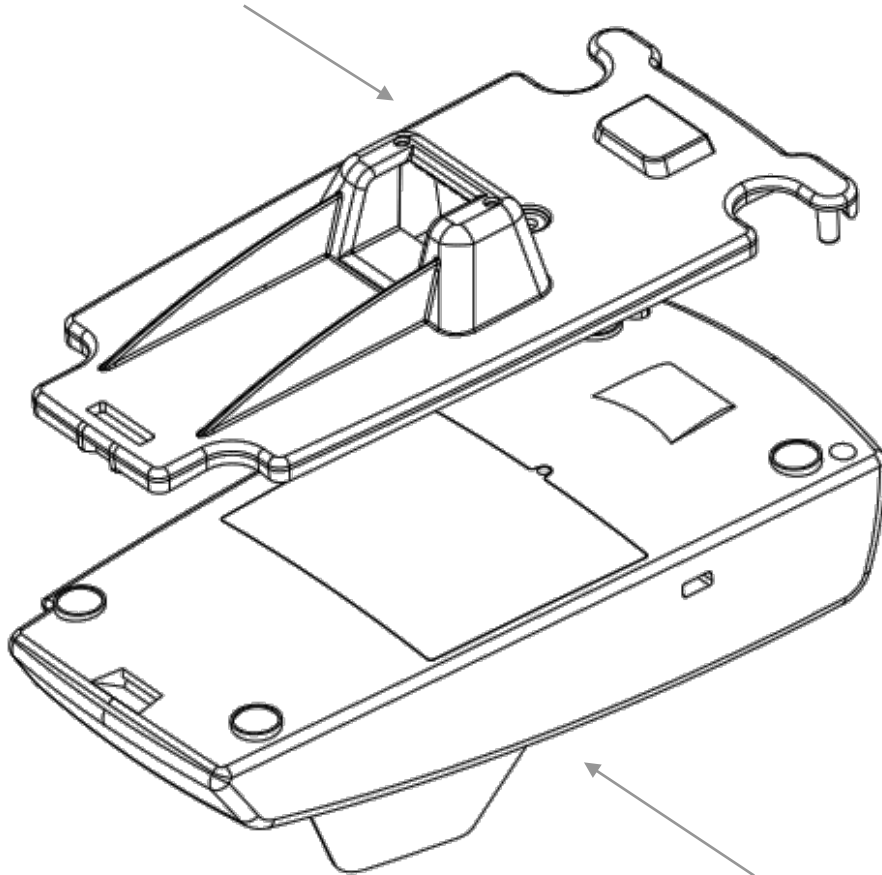

Ingenico iPP320/350

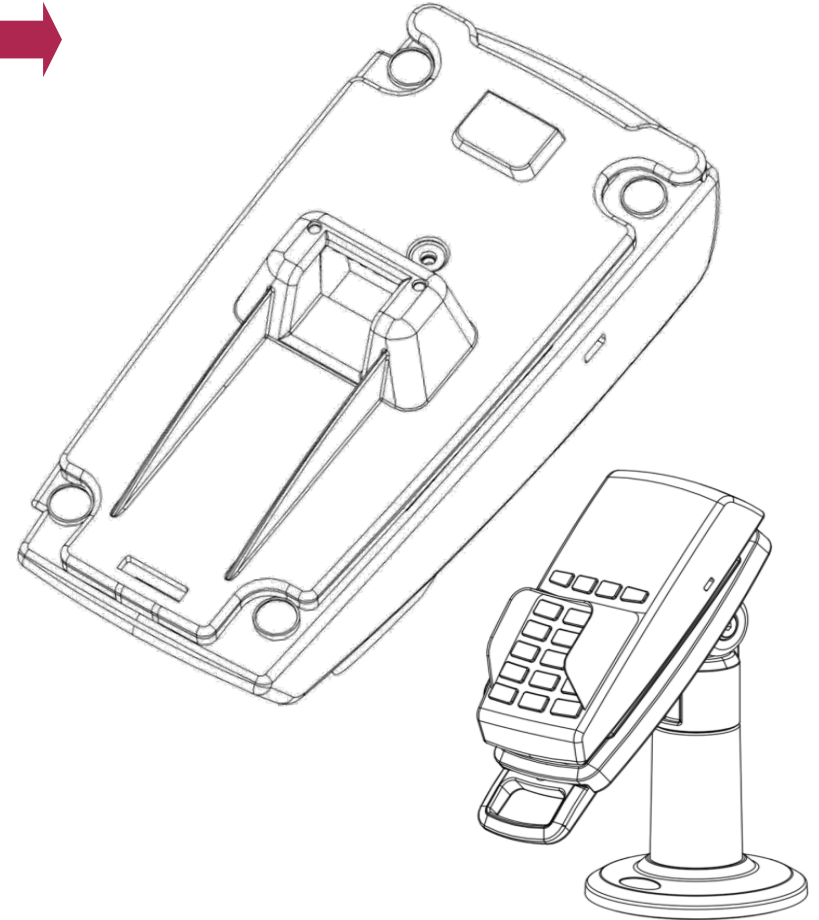

Ingenico iPP320/350 - PEDPack

Quick Installation Guide


NOTE

Quick &
Easy Install

No tools
required


PARTS

x1

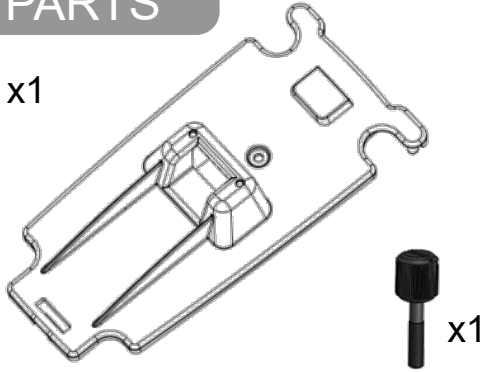


1A

Remove screw if
present

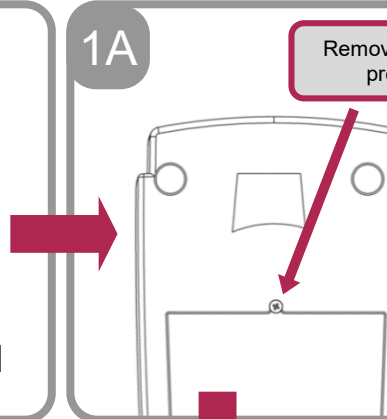


1B


Locate
bosses in
holes

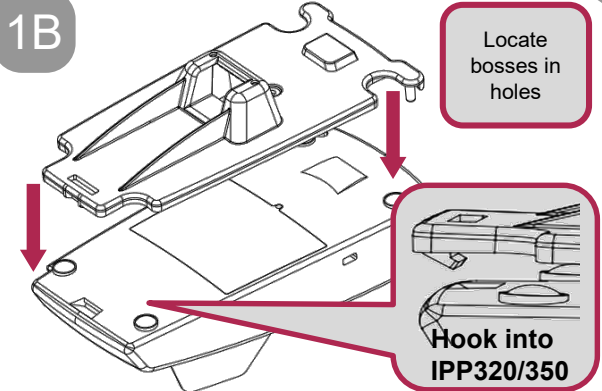

2

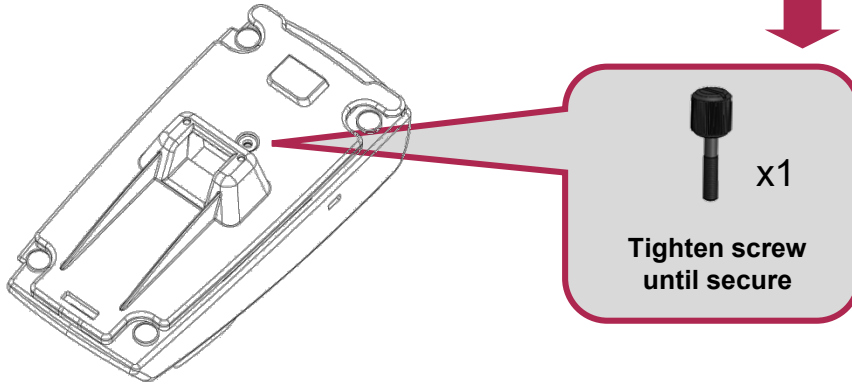

3

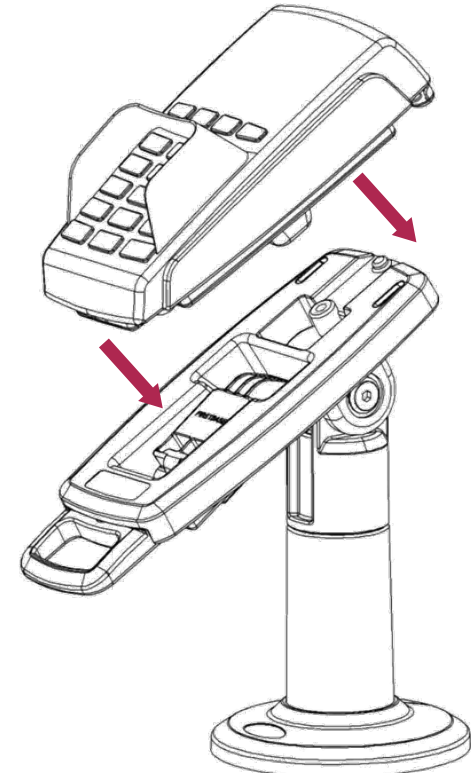


4

OPTIONAL

If locking device, turn key
then remove to secure.

To unlock, first ensure
key fitted.

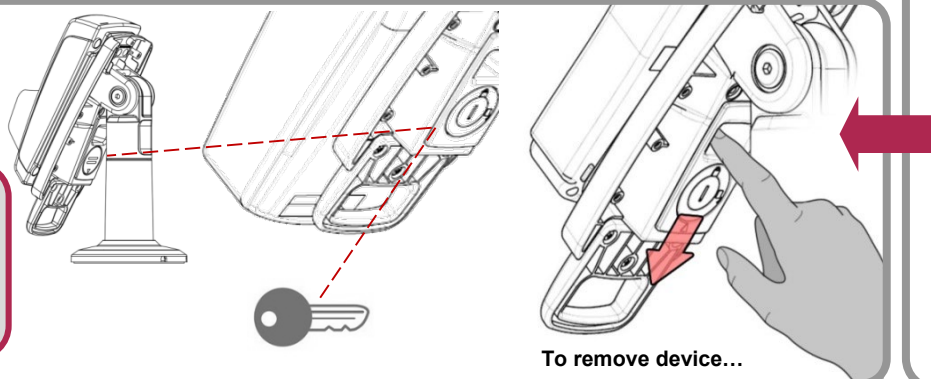

To remove device...